


DIE CUT (Do Not Print)

it. innovative technology.™

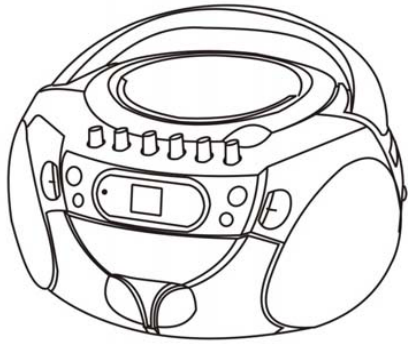

ITBB-601 COMPACT DISC DIGITAL AUDIO

INSTRUCTION MANUAL

NOTE: Please read and follow these instructions before using your unit.

WARNING
TO PREVENT ELECTRIC SHOCK; DO NOT USE THIS PLUG WITH AN EXTENSION CORD RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADES EXPOSURE.
TO PREVENT FIRE OR SHOCK HAZARD; DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 The lightning flash with arrowhead symbol, with an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.
LASER SAFETY This unit uses a laser. Only a qualified service person should remove the cover or attempt to service this device to avoid possible eye injury. Caution: USE OF CONTROLS OR ADJUSTMENT OF PERFORMANCE OF PROCEDURE OTHER THAN SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.	DANGER:  INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED. AVOID DIRECT EXPOSURE TO LASER BEAM.	


1

WARNING

- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- It shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not place the product in closed bookcases or racks without proper ventilation.
- CLASS 1 LASER PRODUCT
- The batteries (Battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire, or the like.
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

2

LOCATION OF CONTROLS

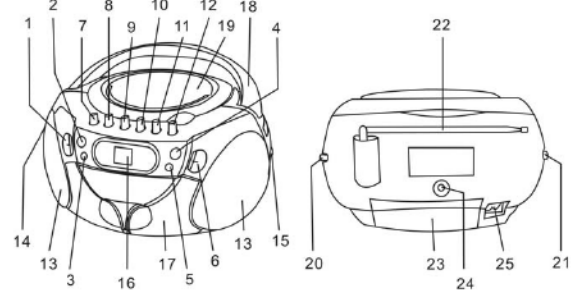

1. CD Program Button	14. Volume Control
2. CD Skip + Button	15. Tuning Control
3. CD Skip - Button	16. LED Track Display
4. CD Play/Pause Button	17. Cassette Compartment
5. CD Stop Button	18. Handle
6. CD Repeat Button	19. CD Compartment
7. Cassette Eject Button	20. Band Switch
8. Cassette Stop Button	21. Function Switch
9. Cassette F.F. Button	22. Telescopic Antenna
10. Cassette Rewind Button	23. Battery Compartment
11. Cassette Play Button	24. Phones Jack
12. Cassette Record Button	25. AC Socket
13. Speaker	

3

AC OPERATION
Before operation, please make sure that the VOLTAGE on the set corresponds to the VOLTAGE of your local area. Unravel the AC line cord, insert one end into the AC socket on the set and the other end into a standard AC outlet.

BATTERY OPERATION
Disconnect the AC cord set completely. Open the Battery Compartment door and insert 6 1.5V size "C" batteries into the battery compartment, with battery polarity as shown inside the battery compartment.

RADIO OPERATION

- Slide the Function Switch to the RADIO position.
- Slide the Band Switch to the desired band wave.
- Turn the **Tuning Control** to your desired radio station's frequency.
- Adjust the sound level by rotating the **Volume Control**.
- To turn off the radio simply slide the **Function Switch** to TAPE position.

ANTENNA
For best reception, fully extend the FM Antenna to receive FM stations. For AM reception, the unit has a built-in antenna, turn the whole unit for best reception.

4

CASSETTE OPERATION

Tape Playback
Press the Eject button to open the cassette door, insert a cassette tape into the Cassette Compartment and push the cassette door to close. Slide the Function Switch to TAPE position and press the Play button to start playing the tape. Adjust the Volume Control to your desired volume level. To stop the tape, simply press the Stop button.

Fast Forward and Rewind
The tape can be fast forward or rewind by pressing the Fast Forward button or the Rewind button respectively.

Pause Function
During playback or recording, the tape can be stopped temporarily by pressing the Pause button. To continue playback or recording, press the Pause button once again.

Auto Stop System
When the tape runs to its end during playback or recording, the cassette operation will be stopped automatically. CAUTION: To avoid damage to the cassette mechanism or to the cassette tape, always press the Stop button between each operation.

CASSETTE OPERATION

- Tune to desired radio program as described in the RADIO OPERATION section.
- Insert a blank cassette tape into the Cassette Compartment.
- Press the Record button and the Play button simultaneously to start recording. With the built-in Automatic Level Control (ALC), the best recording quality is

5

automatically adjusted. Changing the volume level will not affect the recording.

- To stop recording temporarily, press the Pause button. To continue the recording, press the Pause button once again.
- Press the Stop button to stop recording.
- When the tape runs its end, the cassette operation will be stopped automatically.

CD OPERATION

Playing CD : Getting Started
Note: Should skipping of tracks occur during CD playing, try turning the volume down. When CD is playing, do not open the CD door.

- Open the CD door by pressing the CD Open Door button. Put a CD into the CD Compartment and close the CD door. Set the Function Switch to CD position.
- When the CD door is closed with a CD inside, the total number of tracks will be shown on the track display and it will go to Stop mode.
- If the CD door is not closed or there is no disc inside then it will go to Stop Mode.

Play / Pause Mode

- When the Play/Pause button is pressed during Stop mode, the first track will be played. The Play/Pause LED indicator will be lighted. The LED track display will show the specific number of tracks being played.
- For interruption while the CD is playing, press the Play/Pause button once. The Play/Pause LED indicator will flash continuously.
- Though the sound stops, the disc will continue to spin. To re-start playing, press the Play / Pause button once again. The music will start from the exact position where it was interrupted.
- To stop the CD, press the Stop button once whether the CD is in Play or Pause mode.

6

Repeat Mode
Repeat 1: When the Repeat button is pressed once, the Repeat LED indicator will light up and flash continuously. This single track will be repeated.

Repeat ALL: When the Repeat button is pressed twice, the Repeat LED indicator will stay lighted. The whole disc will be played continuously.

TO CANCEL THE REPEAT FUNCTION: Press the Repeat button until the lighted Repeat LED indicator is turned off.

Skip and Search Mode

- During Play or Pause mode, when Skip + or Skip - button is pressed once, it will go to the next track or go back to the beginning of the track.
- During play mode, when Skip + or Skip - button is pressed and held, it will search the track with audible high speed forward or backward playback.

Program Mode

- During the Stop mode, press the Program button once and the Program LED indicator will light up. Press the Skip + or Skip - button to your desired track, the LED track display will show the appropriate track number and press Program button.
- Repeat the above procedure until all desired tracks have been programmed. Up to 20 tracks can be programmed.
- To start the programmed playback, press the Play / Pause button once.
- To cancel the programmed play mode, simply open the CD door.

7

RECORDING FROM CD PLAYER

- Slide the Function Switch to CD position.
- Put a CD into the CD compartment with label on top.
- Insert a blank cassette into the Cassette Compartment and press the Cassette Pause button on the cassette deck.
- Press the Cassette Record button and Play button simultaneously of recording stand-by. With built-in ALC, the best recording quality is automatically adjusted.
- Activate the CD player, playing in a desired track as described in the CD Operation Section. Release the Cassette Pause button of the cassette deck to start recording.
- To temporarily stop recording, press the Cassette Pause button. To continue recording press the Cassette Pause button again.
- Press Cassette Stop button of the cassette deck to stop recording, then stop CD playback by pressing CD Stop button of the CD player.

CARE AND MAINTENANCE

Precautions

- Always turn off the unit after use.
- Keep the unit away from magnetic objects, water, or heat sources.
- Use a clean soft cloth moistened with lukewarm water to clean the cabinet. Never use chemical cleaners that could damage the finish of the unit.
- Never touch the CD pickup and lens. If fingerprints get on pickup lens, clean it gently with a commercial lens cleaner.
- Disconnect the unit from any power sources before cleaning.
- To remove a disc from its storage case, press down on the center of the




8

case and lift the disc out, holding it carefully by the edges.

- Fingerprints and dust should be carefully wiped off the disc's recorded surface with a soft cloth. Unlike conventional records, compact discs have no grooves to collect dust and microscopic debris so gently wiping with a soft cloth should remove most particles. Wipe in a straight line from the inside to the outside of the disc. Small dust particles and light stains will have absolutely no effect on reproduction quality.
- Never use chemicals such as record sprays, anti-static sprays, benzene or thinners to clean compact discs. These chemicals can irreparably damage the disc's surface.
- Discs should be returned to their cases after use. This avoids serious scratches that could cause the Laser pickup to skip.
- Do not expose discs to direct sunlight, high humidity, or high temperatures for extended periods. Long exposure to high temperatures can warp the disc. Do not stick paper or write anything with a ballpoint pen on the label side of the disc.

SPECIFICATIONS

Frequency Range	AM 530 - 1710 KHz FM 88 - 108 MHz
Power Supply:	AC 120V ~ 60Hz DC 9V
Made in China	

Specifications are subject to change without prior notice.

9

Innovative Technology Electronics Corp.
Limited Warranty
90 Days Labor, One Year Parts

Innovative Technology Electronics Corp. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the original purchaser MUST present a sales receipt / proof of purchase indicating date of purchase, amount paid, and place of purchase. Send the unit prepaid to the address below in the original packaging or reasonable substitute to prevent damage. You "Must" include your full name, shipping address and telephone number. No return will be shipped back to a PO Box. Please include your check or money order in the amount of \$12.00, payable to Innovative Technology Electronics Corp. to cover handling and return shipping charges. (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information.

Send all inquires or returns to:
Customer Service Dept.
Innovative Technology Electronics Corp.
4 Anchor Way, Port Washington, NY 11050
Tel : 1-877-ITECH-97 (1-877-483-2497)
EMAIL: support@ithomeproducts.com

There are no express warranties except as listed above.

11

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Model #: ITBB-601
©2009 Innovative Technology.
4 Anchor Way,
Port Washington, NY 11050
www.ithomeproducts.com