



Made for  
 iPod  iPhone  iPad



Model: ITIU-760  
Under-Cabinet Dock  
Designed For iPad™

KEEP THE MANUAL FOR FUTURE REFERENCE.

# Table of Content

IMPORTANT SAFETY INSTRUCTIONS.....	3
COPYRIGHT .....	4
BUTTONS AND CONTROLS.....	5
REMOTE CONTROL UNIT.....	8
UNDER MOUNTING THE UNIT .....	9
CONNECT THE POWER CABLE.....	10
SET THE CLOCK.....	10
SET THE COUNT DOWN TIMER .....	11
TURN ON OR SET TO STANDBY .....	11
SET THE SOUNDS .....	11
SET THE VOLUME LEVEL.....	11
SET THE EQ.....	11
LISTEN TO THE RADIO .....	11
SELECT A BAND .....	11
TUNE TO A STATION .....	11
TO IMPROVE THE RECEPTION.....	12
TO STORE A STATION MANUALLY.....	12
TO LISTEN TO A STORED STATION .....	12
PLAY A DOCKED DEVICE .....	12
ROTATE THE DOCK AT VALID ANGLES.....	12
RETRACT THE DOCK .....	13
TO DOCK THE iPad/iPHONE.....	13
PLAY THE iPad/iPHONE.....	15
USE THE ALARM.....	15
SET THE SLEEP TIMER (TIME OFF).....	16
SPECIFICATIONS .....	16
FCC STATEMENT .....	17
WARRANTY .....	18

## IMPORTANT SAFETY INSTRUCTIONS



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**ATTENTION**  
RISQUÉ/ÉLECTROCUTION  
NE PAS OUVRIR



WARNING: SHOCK HAZARD - DO NOT OPEN



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**CAUTION:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not place any heating or cooking apparatus beneath this unit.

**CAUTION:** The apparatus should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the apparatus.

**CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

**CAUTION:** Caution Marking and rating plate was located at bottom enclosure of the apparatus.

The mains plug is used as disconnect device. The mains plug of apparatus should not be obstructed OR should be easily accessed during intended use. To be completely disconnect the power input, the mains plug of apparatus should be disconnected from the mains.

Battery should not be exposed to excessive heat such as sunshine, fire or the like.

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer’s instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide

blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Minimum distances (5 cm) around the apparatus for sufficient ventilations.
16. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
17. No naked flame sources such as lighted candles should be placed on the apparatus.
18. Attention should be drawn to the environmental aspects of battery disposal.
19. The use of apparatus in tropical and/or moderate climates.

 



## COPYRIGHT

\* “Made for iPod” and “Made for iPhone” and “Made for iPad” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.


\*\* iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc.

# BUTTONS AND CONTROLS

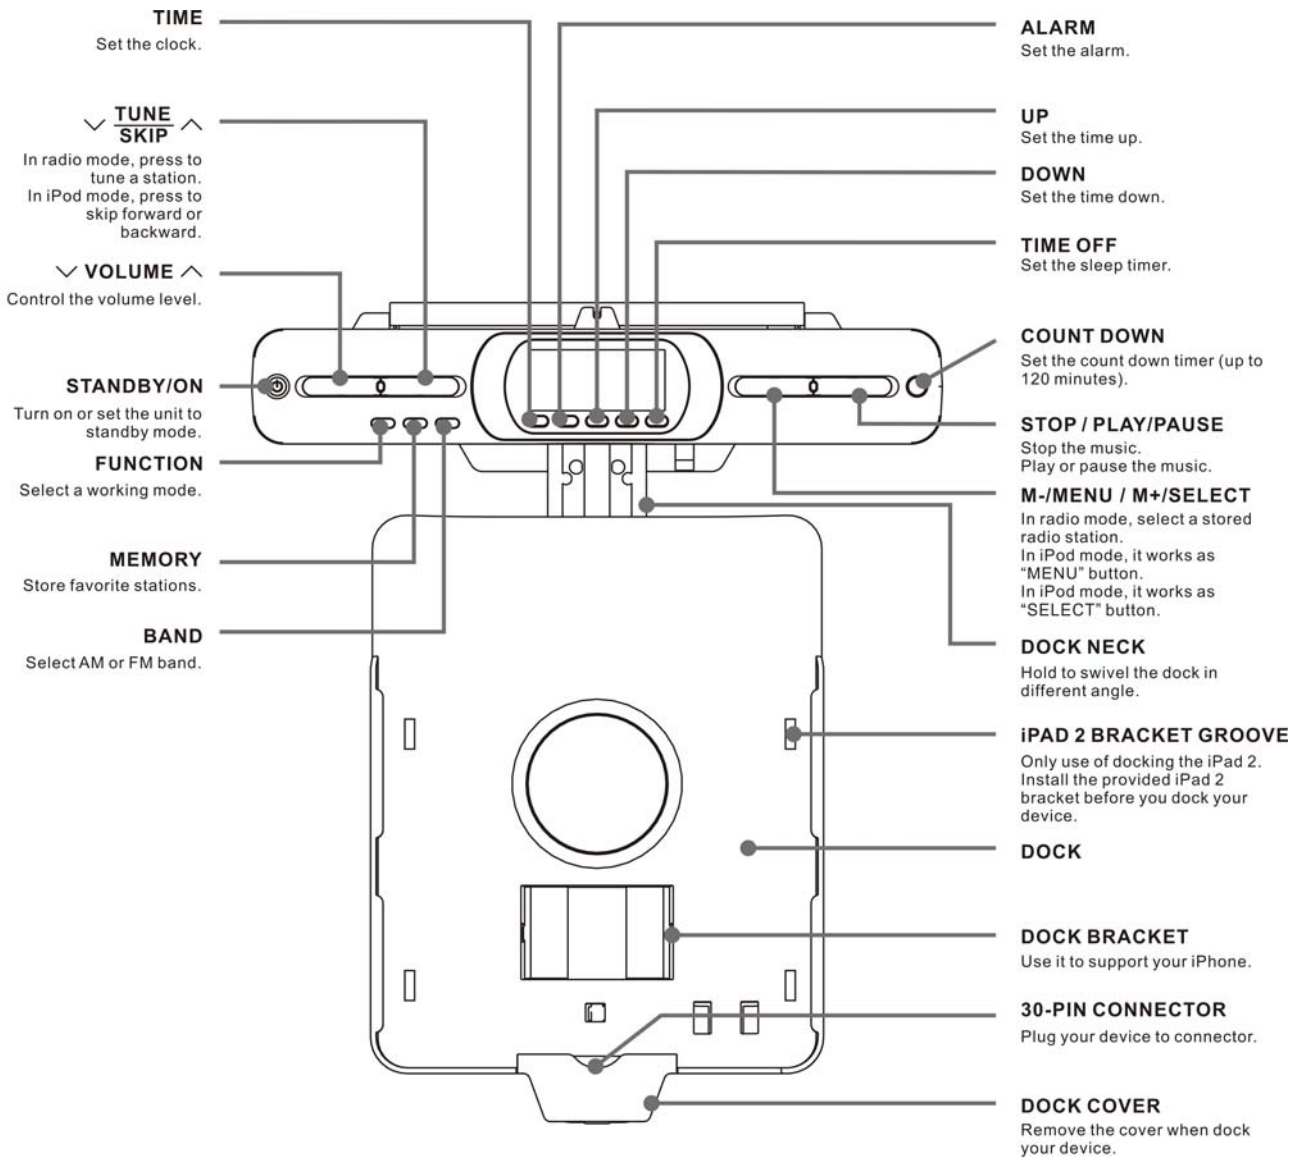


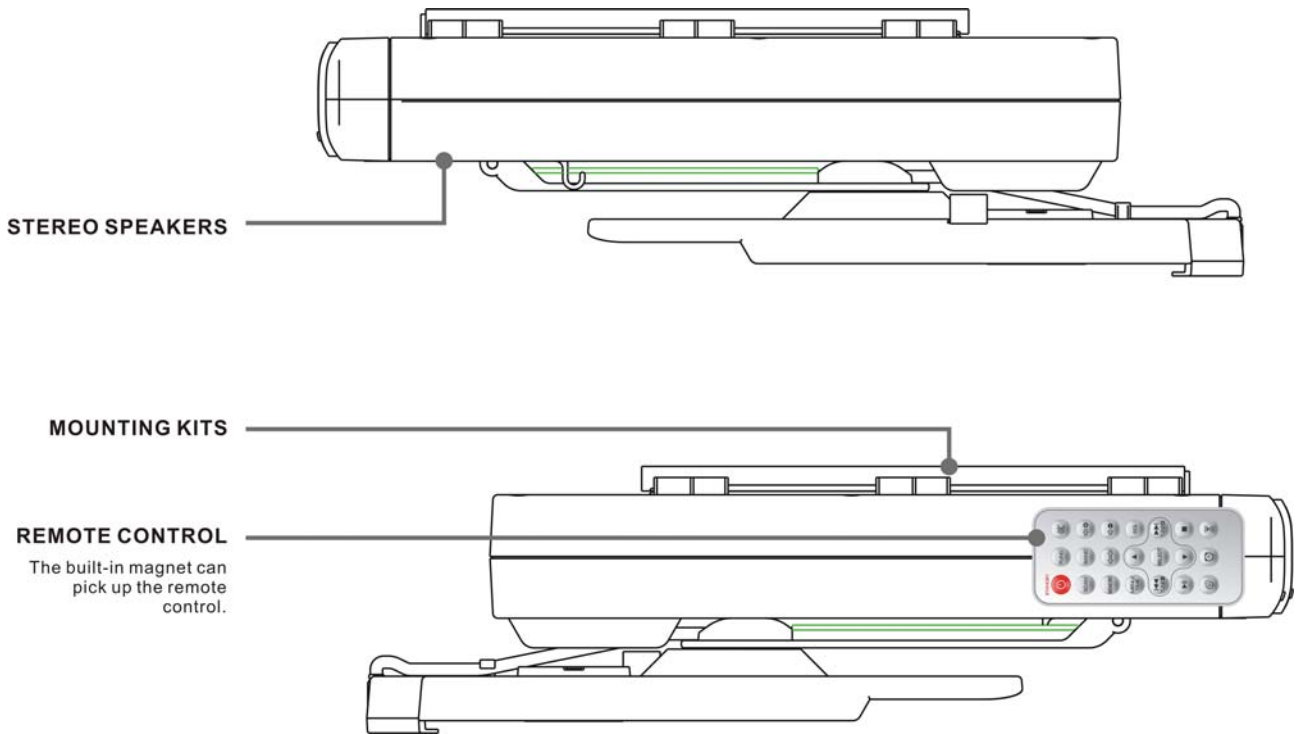

**LCD DISPLAY**

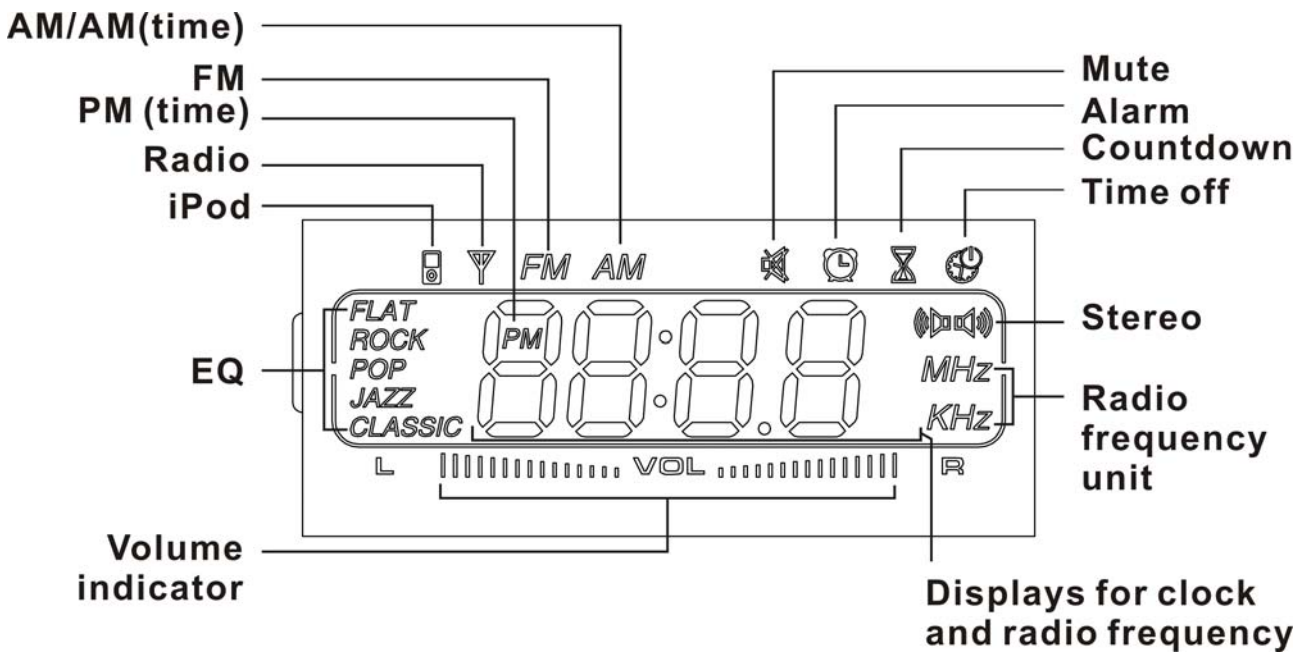

## REMOTE CONTROL

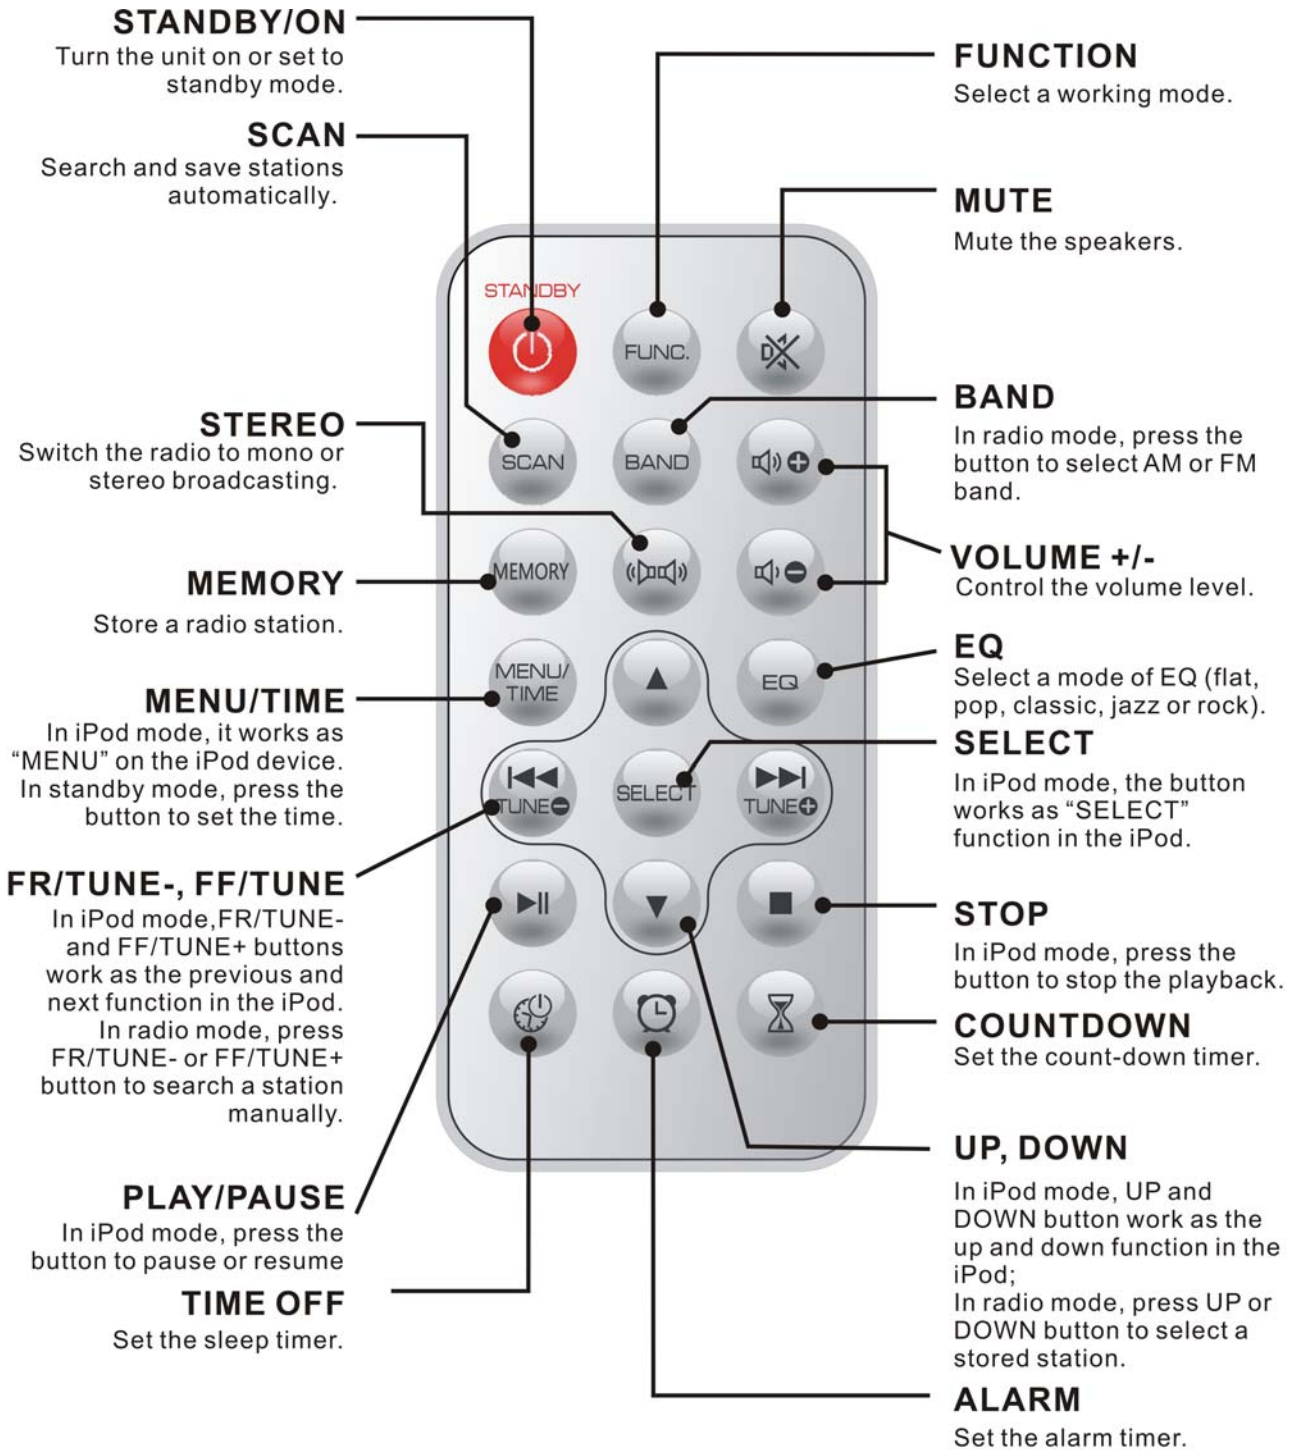 

## REMOTE CONTROL UNIT


The Remote Control Unit can operate the unit from a distance. When operating the remote control unit, point it towards the front panel of the unit.

- Even if the remote control unit is operated within the effective range, remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the remote control unit is operated near other appliances which generate infrared rays, or if other remote control devices using infrared rays are used near the unit, it may operate incorrectly. Conversely, the other appliances may operate incorrectly.

The remote control unit has a built-in magnet. If the remote control is not in use, place it to the side of the unit where a stick of magnet label lies.


### TO ACTIVATE THE REMOTE CONTROL

The remote control is built with cell battery before shipment. To activate the battery, remove the transparent plate at the bottom of the remote control.

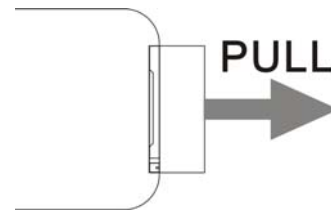

### BATTERY INSTALLATION

1. Remove the battery compartment cover.
2. Put in the lithium battery (CR2025, 3V  $\text{---}$ ). Make sure that the battery is inserted with the positive '+' and negative '-' positioned correctly.
3. Close the cover.

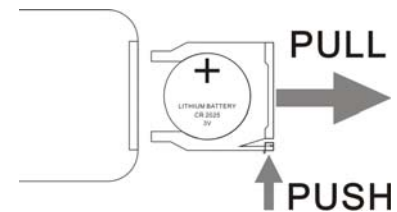

### Battery Replacement

If the distance required between the remote control unit and main unit decreases, the battery is exhausted. In this case, please replace the battery with new one.

### Battery Precautions

- Be sure to insert the battery with correct positive + and negative - polarities.
- Refer to the precautions on the battery labels.
- When the remote control unit is not to be used for a long time (more than a month), remove the battery from the remote control unit to prevent it from leaking. If it leaks, wipe away the liquid inside the battery compartment and replace the battery with new one.
- Do not heat or disassemble batteries and never dispose of old batteries by throwing them in a fire.

## UNDER MOUNTING THE UNIT

**IMPORTANT:** You should only use the mounting accessories (included) when you mount the unit. Use of unapproved accessories that have not been designed specifically for this unit may lead to safety hazards.

1. Use the provided Cabinet Mounting Template to location where you want to mount the unit. Drill the mounting holes directly then done, remove the template.

**Caution:** To reduce the risk of danger, consult the technician if the location you want to mount the unit is firm enough to hold weights and safe before you do the mounting.

2. The MOUNTING KIT is highlighted (refer to illustration (a)).

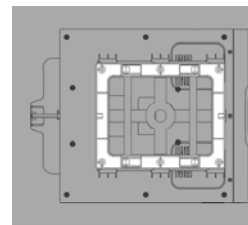


Illustration (a)

3. Pull out the MOUNTING KIT (refer to illustration (b)).

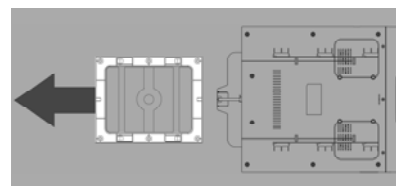


Illustration (b)

4. If you find unit has to be mounted too high to reach, use the supplied long plastic poles. Insert the long plastic poles into the position holes (refer to illustration (c)).

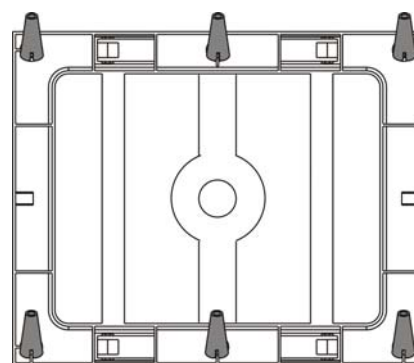


Illustration (c)

5. Reverse the MOUNTING KIT (refer to illustration (d)).

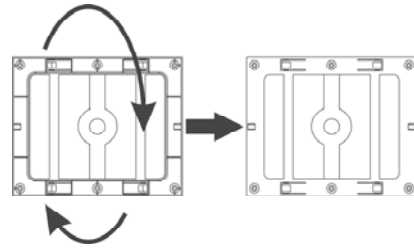


Illustration (d)

6. Position the MOUNTING KIT and fix it on the mounting place with the supplied screws (refer to illustration (e)).

**Caution:** To reduce the risk of fire, do not place any heating or cooking apparatus beneath this unit.

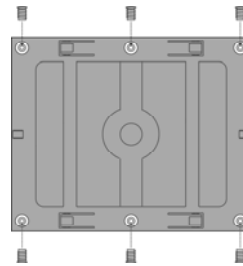


Illustration (e)

7. Slide the unit back to the MOUNTING KIT (refer to illustration (f)).


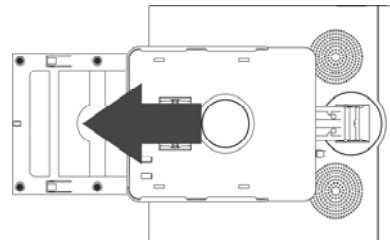


Illustration (f)

## CONNECT THE POWER CABLE

Unwind the power cable and insert the plug into the household working electrical outlet.

Now the unit is ready to use.

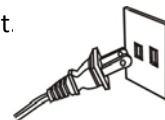








## SET THE CLOCK

When the power cable is connected to the electrical outlet, “12:00” starts to blink on the screen. If you find the unit reverses to this display, you need to set the time.

1. Press and hold **TIME** button (or **MENU/TIME** button on remote control) for approx. 2 seconds. Hour digits start to blink.
2. Press **UP / DOWN** button (or **▲ / ▼** button on remote control) to set the hours.
3. Press **TIME** button (or **MENU/TIME** button on remote control). And then the minute digits start to blink.
4. Press **UP / DOWN** button (or **▲ / ▼** button on remote control) to set the minutes.
5. Press **TIME** button (or **MENU/TIME** button on remote control) to again to save the setting.

## SET THE COUNT DOWN TIMER

You can set the count-down timer and when the preset time is reached, the buzzer will alert.

1. Press the **COUNT DOWN** button (or  button on remote control) "000" shows on the display.
2. Press **UP / DOWN** button (or  /  button on remote control) to set the timer. You can set up to 120 minutes at most.
2. Press the **COUNT DOWN** button (or  button on remote control) again to save the setting and the timer starts to work.  
**TIP:** To view the remained time, briefly press the **COUNT DOWN** button (or  button on remote control).
3. When the set time has expired, the buzzer will goes off.
4. Press any button to stop the buzzer.
5. To terminate the countdown timer, press and hold the **COUNT DOWN** button (or  button on remote control) until the icon () disappears from the display.

## TURN ON OR SET TO STANDBY

Press the **STANDBY/ON** button to turn the unit ON.

Press it again to set the unit to standby mode.

## SET THE SOUNDS

### SET THE VOLUME LEVEL

Press the **VOLUME DOWN / VOLUME UP** button (or  /  on remote control) to adjust the volume level.

### SET THE EQ

Press the **EQ** button on the remote control to select a desired mode: flat, rock, pop, jazz or classic.

## LISTEN TO THE RADIO



Press the **FUNCTION** button repeatedly to select radio mode.

### SELECT A BAND

Press the **BAND** button repeatedly to select AM or FM.

### TUNE TO A STATION

**To Auto-tune a station:**

Press the **TUNE-/SKIP-** or **TUNE+/SKIP+** button (or  /  button on remote control) for more than 2 seconds, the unit will search for an available station and then start to broadcast it.

### Auto Memory Storing:

Press the **SCAN** button on the remote control to search and save usable stations.


**NOTE:** The unit can only store 20 FM stations and 10 AM stations at most. If your favorite station has not been stored you need to save it manually. (Refer to “TO STORE A STATION MANUALLY”.)

### To tune a station manually:

Press the **TUNE-/SKIP-** or **TUNE+/SKIP+** button (or  /  button on remote control) briefly to find a station manually.


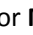 
## TO IMPROVE THE RECEPTION

If you find the AM station is not clearly enough, turn the unit to another direction until you find the station is very clear in a particular direction, since the AM band antenna is internal and directional.



If you find the FM station is not clearly enough, extend the power cable as it acts an FM antenna. When the FM reception is strong, the unit will turn to stereo broadcast and the stereo icon () will show on the display.

## TO STORE A STATION MANUALLY

  You can store 20 FM stations and 10 AM stations at most.

1. Press the **MEMORY** button and the “P” appears and digits “01” start to blink on the display.
2. Press the **M-/MENU** or **M+/SELECT** button (or  /  button on remote control) to select a memory address.
3. Press the **MEMORY** button again and the station has been saved.

## TO LISTEN TO A STORED STATION

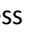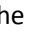
In radio mode, press the **M-/MENU** or **M+/SELECT** button (or  /  button on remote control) to select a station you have stored.

## PLAY A DOCKED DEVICE

### ROTATE THE DOCK AT VALID ANGLES


The dock can swivel 45 or 90 degree radius. Hold the dock neck and swivel it.

**IMPORTANT:** The dock can only swivel as shown below. Do not force it to turn in other angles as it could damage the unit.

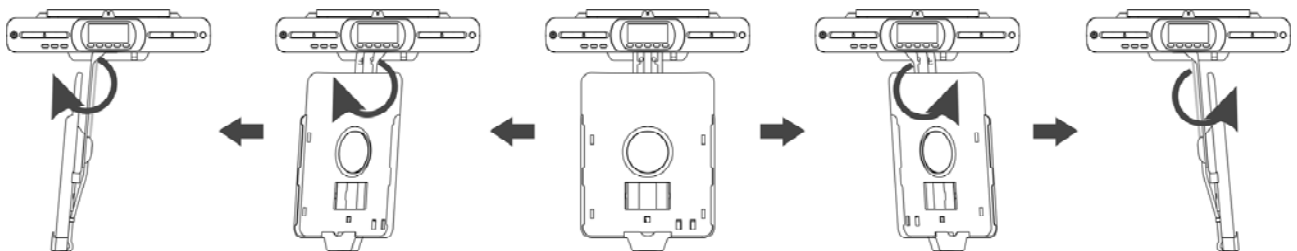


You can also dock the iPad on either portrait mode or landscape mode.

**IMPORTANT:** The dock can only swivel in single direction as shown below. Do not force it to turn in other direction as it could damage the unit.

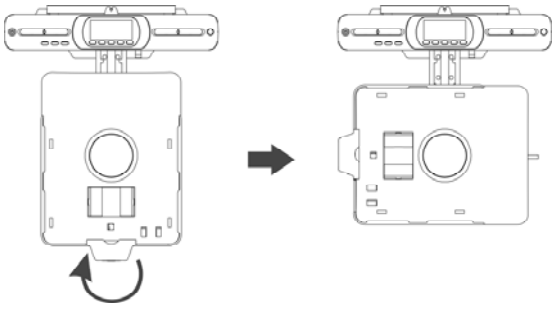

## RESTRACT THE DOCK

If you do not dock any device, retract the dock.

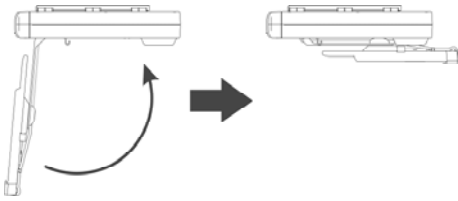

## TO DOCK THE IPAD/IPHONE


The 30-pin connector is located at the bottom of the dock and is designated to be floating on purpose so as to accommodate all devices of iPad and iPhone.

When your device is docked and connected to the 30-pin connector, sounds will only come out from the built-in stereo speakers on this unit and your device will be muted.


**TIPS:** Remove the dock cover before you dock your device.

### iPad:

- Turn the dock in the direction shown as below. Remove the dock cover. Slide your iPad from right to left to the 30-pin connector. Press and fix the connector then connect the iPad to the connector. Refit the dock cover.

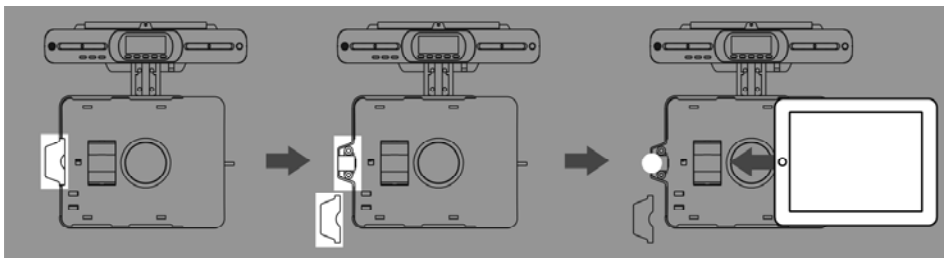


- To remove the iPad, press on the dock cover then slide out your iPad.

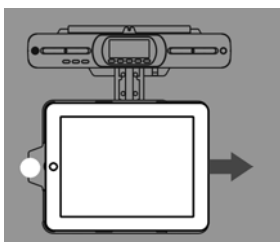


**NOTE:** To fully hold the iPad 2 insert the iPad 2 brackets before you dock the device.

- Obvious the install grooves on both sides of the dock. Match the pins on iPad 2 bracket with the grooves and press the pins into the grooves. Then slide your iPad 2 into the dock.

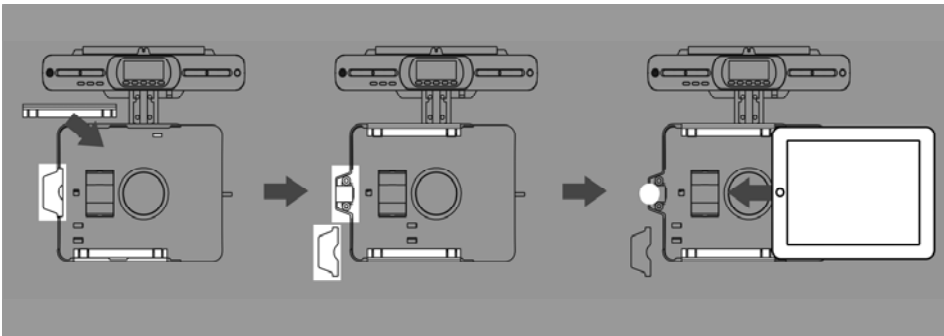


- To remove the iPad 2 bracket, press down the pins with your fingers.

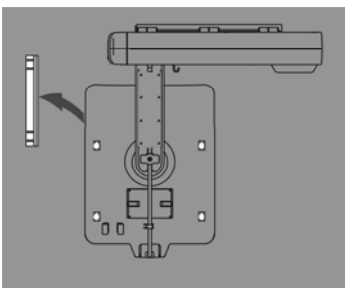


#### iPhone:

- Turn the dock in the direction shown as below. Make the dock bracket “stand-up”. Remove the dock cover then slide your iPhone from left to right to the 30-pin connector. Press and fix the connector and connect your iPhone to the connector. Refit the dock cover.

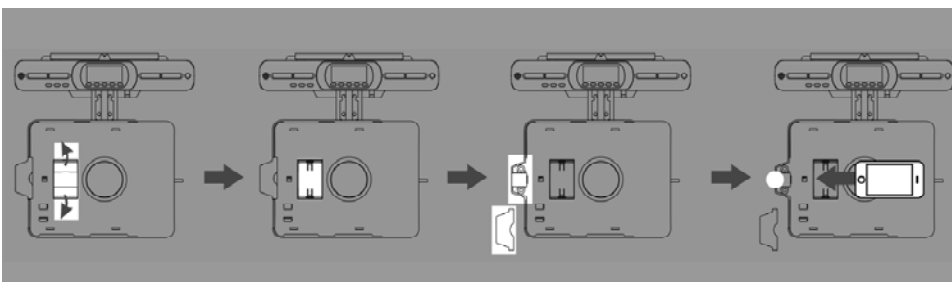

- To remove the iPhone, press on the dock cover then slide out your iPhone.

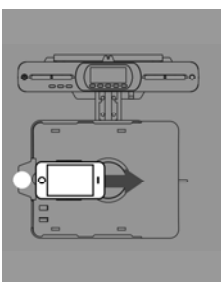


## PLAY THE iPad/iPHONE

When the device is docked onto the unit, press the **FUNCTION** button repeatedly to select radio mode.

### 1. General Control Buttons


**PLAY/PAUSE** button (▶||): It works as the “PLAY/PAUSE” button in the iPod.

**STOP** button (■): It works as the “STOP” button in the iPod.

**M-/MENU** button (or  button on remote control): It works as the “MENU” button in the iPod.

**M+/SELECT** button (or **SELECT** button on remote control): It works as the “SELECT” button in the iPod.


**TUNE-/SKIP-** button (or  button on remote control): It works as the “PREVIOUS” button in the iPod.

**TUNE+/SKIP+** button (or  button on remote control): It works as the “NEXT” button in the iPod.

**UP** button (or ▲ button on remote control): It works as the “▲” button in the iPod.

**DOWN** button (or ▼ button on remote control): It works as the “▼” button in the iPod.




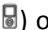 
### 2. Charging The Device

The unit will charge the device during docking via the 30-pin connector, the charging voltage is 5V  2.1A.

**NOTE: The 30-pin connector does not charge your device in radio mode.**

## USE THE ALARM

**Prerequisite:** The unit MUST be set to STANDBY mode.

1. Press and hold the **ALARM** button (or  button on the remote control) the hour digits start to flash.
2. Press the **UP / DOWN** button (or ▲ / ▼ button on remote control) to set the hours.
3. Then press the **ALARM** button (or  button on the remote control) again the minute digits start to flash.
4. Press the **UP / DOWN** button (or ▲ / ▼ button on remote control) to set the minutes.
5. During the minute digits are still blinking press the **FUNCTION** button repeatedly to select the alarm source: radio () , iPod () or buzzer (default setting, no icon for buzzer). Then wait for approximately 5 seconds and the setting will be saved automatically.

**NOTE:** The setting of the alarm time and source must be set without any interruption.

6. When the time goes off, press the **ALARM** or **STANDBY/ON** button to stop it sounding.


### Fast Switch On / Off The Alarm


Briefly press the **ALARM** button (or  button on remote control) to activate or deactivate the alarm function.

## SET THE SLEEP TIMER (TIME OFF)

You can set the SLEEP TIMER (TIME OFF) so the unit turns itself off after a specified time.


**Prerequisite:** The unit MUST be set ON.

1. Press the **TIME OFF** button (or  button on remote control), "90" flashes on the display.

Continue to press the **TIME OFF** button (or  button on remote control) until the desired time appears on the display.

2. Do not touch any button and wait for approximately 4 seconds, the display reverse the previous working interface and the timer starts to work.

### TIPS:

If you want to terminate the TIME OFF function, press the **STANDBY/ON** button *or* keep pressing the **TIME OFF** button until "00" appears on the display then wait for approximately 4 seconds. The TIME OFF function will be canceled and the icon () will disappear.

If you want to check the remaining time, press the TIME OFF button once, the remaining time will be displayed for a few seconds.

## SPECIFICATIONS

<b>Power Supply:</b>	AC 120V~ 60Hz
<b>Frequency Range:</b>	AM 520 - 1710 kHz FM 87.5 - 108 MHz
<b>Power Consumption:</b>	40 W
<b>Standard Accessories:</b>	Remote Control Unit x1 Battery for Remote Control Unit x1 (Preinstalled in the Remote Control) iPad 2 Bracket x2 Long Plastic Pole x6 Screw (Short) x6 Screw (Long) x6 Template for Cabinet Mounting x1 Instruction Manual x1

\*Design and specification are subject to change without notice.

## FCC STATEMENT

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### CALIFORNIA PROP 65 WARNING

"WARNING" This product contains a chemicals known to the State of California to cause birth defects or other reproductive harm. For more information on these regulations and a list of chemicals, log on the following website address :

<http://www.oehha.ca.gov/prop65.html>

# WARRANTY

Innovative Technology Electronics Corp.

Limited Warranty: 90 Days Labor, One Year Parts

Innovative Technology Electronics Corp. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

**To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at [www.ithomeproducts.com](http://www.ithomeproducts.com) to request an RMA (Return Material Authorization) number to return products for service or replacement.** Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (IT) may issue a replacement to customer for the same item or of one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number.

All returns must be in the original packaging or reasonable substitute to prevent damage.

Customer "Must" include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address.

Please include your check or money order in the amount of

- **USD\$5.00 for items \$10.00 to \$39.99 (Price Paid Per Unit)**
- **USD\$10.00 for items \$40.00 to \$99.99. (Price Paid Per Unit)**
- **USD\$16.00, for items \$100.00 and up. (Price Paid Per Unit)**
- **Shipping fees are non-refundable**

to be payable to Innovative Technology Electronics Corp.(for handling and return shipping charges) (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information.

Send all inquiries or RMA request via our website [www.ithomeproducts.com/support](http://www.ithomeproducts.com/support).

Innovative Technology Electronics Corp.

1 Channel Drive

Port Washington, NY 11050

Toll free: 1-877-483-2497

**Website for support: [www.ithomeproducts.com/support](http://www.ithomeproducts.com/support)**

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER, (IT) SHOULD NOT BE LIABLE FOR ANY INCIDENTAL OR

CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

